



COLD WEATHER ADJUSTMENT TEMPERATURE/RELEASE TIME STOPPING THE THROW ARM ON THE BRAKE

IMPORTANT: NEVER STAND IN FRONT OF A TRAP MACHINE. THE TRAP MACHINE MUST BE TURNED OFF AND THE SPRING RELEASED BEFORE ENTERING THE TRAP HOUSE. NEVER ATTEMPT TO MAKE ANY ADJUSTMENT WHEN THE THROW ARM IS COCKED.

In very cold weather, the pump motor should be turned on 30 to 60 minutes before operating time to warm up the hydraulic oil. If the On/Off/Release switch is turned on too soon, the machine will keep cycling (throwing targets).

Extreme temperature changes may affect the stopping position of the throw arm. Very cold temperature may cause the machine to keep cycling by itself. Very warm weather may cause the throw arm to stop too soon and cause slow pulls.

Refer to the Diagram 37 which shows the throw arm brake assembly and the proper stopping position of the throw arm. Note: The Throw Arm is approximately 1" back from the right edge of the Throw Arm Brake Rubber Pad.



Diagram 37

Correct Position for Stopping the Throw Arm on the Throw Arm Brake